Physics 524

Survey of Instrumentation & Laboratory Techniques: Unit 5: Cooling & Thermal management

Lecture 1 of 4 (26:4)


5.1 Some thermal regulation devices (1)

The humble room thermostat: Bi-metallic strip electric with actuator

Feedback:



slow, thru room air convection

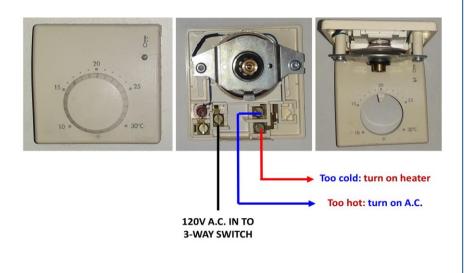

Primary disc valve Primary disc valve Double-valve automotive engine cooling thermostat


The almost-as humble automobile radiator thermostat Feedback:

Fast, immersed, expanding wax plug capsule counteracts closure spring to increase coolant flow as engine warms up

5.1 Some thermal regulation devices (2)

The water heating radiator thermostatic valve: Feedback Fast, immersed, expanding wax plug capsule closes valve orifice as set temperature is approached.



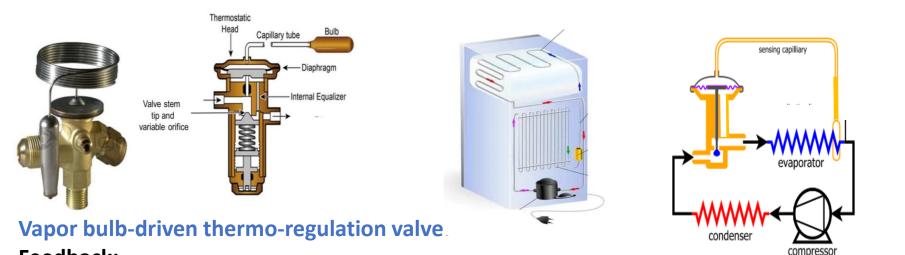


Feedback:

Very Fast, Bulb usually clamped to a metal tube in a cooling circuit:

When sensed tube temp too high vapour expands (or evaporates), pushing on diaphragm, opening valve stem to let more coolant into the circuit.

5.1 Some thermal regulation techniques (1)

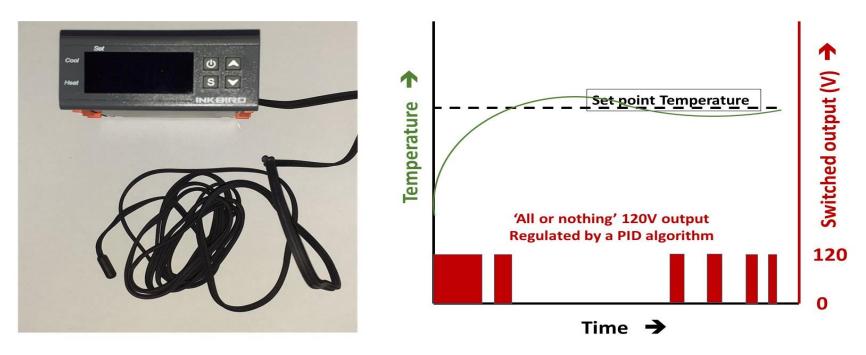

Inexpensive digital controller with NTC thermistor & <u>P</u>ulse <u>W</u>idth <u>M</u>odulated ("All or Nothing") relay output driven by a PID (<u>P</u>roportional, <u>I</u>ntegral and <u>D</u>erivative algorithm)

5.1 Proportional, Integral & Derivative Control (1)

$$u(t) = K_\mathrm{p} e(t) + K_\mathrm{i} \int_0^t e(au) \, \mathrm{d} au + K_\mathrm{d} \, rac{\mathrm{d} e(t)}{\mathrm{d}t}$$


 Three correctional terms K_p, K_l and K_D: proportional, integral and differential gain: form the collective (time dependent) response u_(t) of the control algorithm to differences e_(t) between measured value of a <u>P</u>rocess <u>V</u>ariable & <u>S</u>et <u>P</u>oint to be maintained or reached;

 K_p , $K_l \& K_D$ are "tunable" parameters

- *t* is the current time (or timestamp) of the measured *PV* at which *e*₍₁₎ is calculated.
- The variable *t* is the internal integration time which can take on values from a start time t of the most recent timestamp *t*.
- A modern PID controller will contain a "learn mode" algorithm that will vary *K_p*, *K_I* & *K_D* to find the optimum combination. In doing so it will find the feedback characteristic (or "transfer function") of the system.


One such autotune is the Zeigler-Nicholls approach



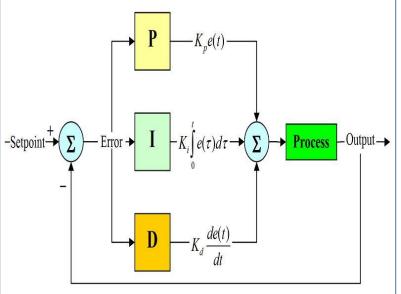

5

5.1 Proportional, Integral & Derivative Control (2)

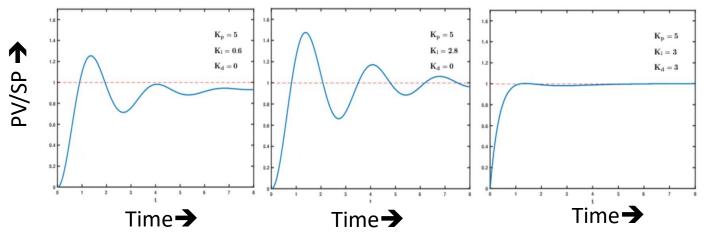

Screenshots (from https://en.wikipedia.org/wiki/File:PID Compensation Animated.gif) the time-dependent response of the measured value (blue curve) of a process variable (PV) following a step change in setpoint (SP) when regulated by an automatic learning-mode PID algorithm. **x-axis**: time (arbitrary units): **y axis**: measured value of the process value relative to the new set point (taken to be 1).

> Physics 524: Survey of Instrumentation & Laboratory Techniques: Unit 5: Cooling & Thermal management © G. Hallewell (2024)

0.2

Time ->

5.2 Monophase liquid cooling (1)

SYSTEMS PACKAGING

Cooling a Superfast Computer

Heat is removed from the CRAY-2 supercomputer by a cooling fluid that flows over each component.

By Richard D. Danielson, 3M Commercial Chemicals Div., St. Paul, Minn., Nick Krajewski and Jerry Brost, Cray Research, Chippewa Falls, Wisc.

A new generation supercomputer, the CRAY-2, uses a novel approach to cooling which will very likely influence computer construction in the future. Made by Cray Research Inc., the supercomputer combines diminutive physical size with very high speed and memory capacity.

The new supercomputer is cooled by immersing the entire computer power supplies, memory boards, logic circuits and main processors — in an inert, high-dielectric liquid bath. CRAY-2 works sit in a sealed 155-gal tank of 3M's Fluorinert perfluorocarbon, electronic liquid FC-77.


Supercomputer packaging

The CRAY-2 design makes use of significant technological innovations, with capabilities which are an order of magnitude greater than those of its predecessor. These include a clock cycle of 4.1 ns, four background processors for independent or combined tasking, high-speed local random-access memory of 256 million words, and an effective throughput six to 12 times that of the physically larger CRAY-1.

In dramatic counterpoint to its expanded speed and capacity, the CRAY-2 is only about half the size of Cray's earlier system, standing approximately 45-in. high with a diameter of less than 5 ft.

The CRAY-2's relatively small size is a necessity for its blazing speed. Signal propagation times from pointto-point within the system must be extremely short, or the exotic processor and memory circuits cannot do their job. But physical compactness creates enormous heat buildup problems. At very high computer speeds,



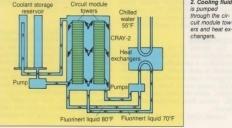

A cold blast from the past:

Cray II supercomputer completely immersed in (electrically non-conductive) liquid coolant here 3M FC-77[®] fluorocarbon* (weighs ~1.8 x H₂O)

(See liquid pumps and fluorocarbon / water heat exchanger).

Such fluorocarbon fluids have very high Global Warming Potential (GWP_{20y}: 5000-10000 CO₂) and are being progressively replaced with new

compounds.




The military remain big users (e.g. radar systems)

5.2 Monophase liquid cooling (2)

Heat capacity, temperature rise vs. power & liquid flow rate

- A fluid will rise in temperature according to its mass, *m* (kg), the heat energy *Q*, (Joules) absorbed, and its own heat capacity, *C*, expressed in units of J.kg⁻¹.K⁻¹;
- **C** relates the energy needed to raise 1kg of the fluid by 1 °C or 1 Kelvin (K);
- Let's consider a practical situation: We have a source of heat, *P*, (Watts or J.s⁻¹) which we wish to evacuate using a cooling fluid, but what mass flow *m* (kg.s⁻¹) do we need, and by how much can we allow the temperature in the fluid itself to rise (*DT*, °C)?
- Liquid temperature rise is related to the absorbed power & liquid heat capacity via



5.2 Monophase liquid cooling (3)

Approximate heat capacity of some cooling fluids

[references refer to unit support notes]

Fluid (Gas)	C: J/(kg.°C)	Fluid (Liquid)	C: J/(kg.°C)
Air (20 °C, 1 bar)	1006 [2.1]	Mercury	126
Helium (20 °C, 1 bar)	5192 [2.1]	3M NOVEC [®] 649 (liq.) (20 °C)	1103 [2.2]
Hydrogen (20 °C, 1 bar)	14288 [2.1]	3M FC-72 [®] (liq.) (25 °C)	1100 [2.3]
		Water (liq.)	4187 [2.1]

5.2 Monophase liquid cooling

Problem (1) – see also separate sheet:

A core processor chip in a PC dissipates 100W of heat. The user has attached a liquid-channel cooling block directly to it, through which coolant liquid can flow.

The user has a choice between water or a non-conductive modern liquid coolant with GWP=0 (3M NOVEC[®] 649 [2.2]). What is the mass flow *m* of (1) water and (2) 3M NOVEC[®] 649 needed to ensure that the coolant liquid temperature rise *DT* is limited to 10 °C?

5.2 Monophase liquid cooling (4)

In practice of course, heat must be channelled into a cooling fluid through adhesive or thermal grease and through the wall of the cooling block into the fluid.

All these materials have thermal resistances which stack up, resulting in a significant temperature offset between the dissipating structure and cooling fluid evacuating the heat.

5.2 Thermal Conductivity, thermal resistance – getting heat into a coolant

Thermal conductivity & resistance can be considered similarly to electrical conductivity & resistance, with expressions similar those derived from Ohm's law.

The temperature difference, δT (K) across a thermal interface (a good thermal conductor like a metal or a poor conductor like a foam insulator) of thickness I (m) when a power density of q (W.m⁻²) is applied to one side is given by:

$$\delta T = \frac{q.l}{k}$$

where \boldsymbol{k} is the thermal conductivity of the interface expressed in SI units of W.m⁻¹.K⁻¹

Alternatively the above equation can be expressed in terms of the thermal *resistance*, **R** (expressed in SI units of m.K.W⁻¹) of the interface as follows:

This equation has a similar form to that of the expression linking the voltage drop,

 δV , along a wire of cross sectional area, a, and length, l, with its resistivity, r, in Ohm-metres:

$$\delta V = \frac{I.r.l}{a}$$

where (I/a) is the current flux, in A.m⁻², in direct analogy to q in W.m⁻²


Approximate thermal conductivity of some common materials

Material	Thermal Conductivity w.m ⁻¹ .K ⁻¹	Application	
Air (20 °C, 1 bar)	0.026??? [2.1]	Insulator	
Aluminium	236	Good elec & heat conductor	
Asbestos (200 °C)	0.21	Historic insulator (hazardous)	
Beryllia (ceramic)	285 (room temp)	Heat spreader (hazardous)	
Brass	109–160	Good elec & heat conductor	
Copper	400	Very good elec & heat conductor, cooling systems	
Cork	0.043	Insulator	
Diamond (CVD wafer)	2300	Heat spreader	
Dow Corning 340 heat conducting paste	0.67	Demountable thermal connection heat source $ ightarrow$ heat sink	
3M FC-72® (liq.) (25 °C)	0.06 [2.3]	Cooling liquid	
Glass	0.935		
Glass Fiber (20 °C)	0.042	Insulator	
Gold	312	Electrical connections	
Graphite	151	Heat spreader	
Lead	35	Electrical connections	
Mica (50 °C)	0.43	Heat resistant Electrical Insulator	
3M NOVEC® 649 (liq.) (25 °C)	0.06 [2.2]	Cooling liquid	
Rockwool (20 °C)	0.034	Insulator	
Silver	425	Very Good elec & heat conductor	
Silicon	148-150	Active semiconductor	
304, 316 Stainless Steel	14-18 (room temp)	Poor heat conductor (for a metal), cooling systems	
STYCAST [®] 2850 (Emeron & Cuming)	1.02-1.68 [2.4]	Thermally conductive epoxy: permanent connection heat source $ ightarrow$ heat sink	
Urethane Foam (Rigid) (20 °C)	0.026	Insulator	
Water (20° C)	0.613	Cooling liquid	
Laboratory Techniques: Unit 5: Cooling & 13			

Thermal management © G. Hallewell (2024)

5.2 Monophase cooling and conducting heat into a coolant (1)


Example from a common application: cooling a processor core with a liquid-channel block (plan and elevation views)

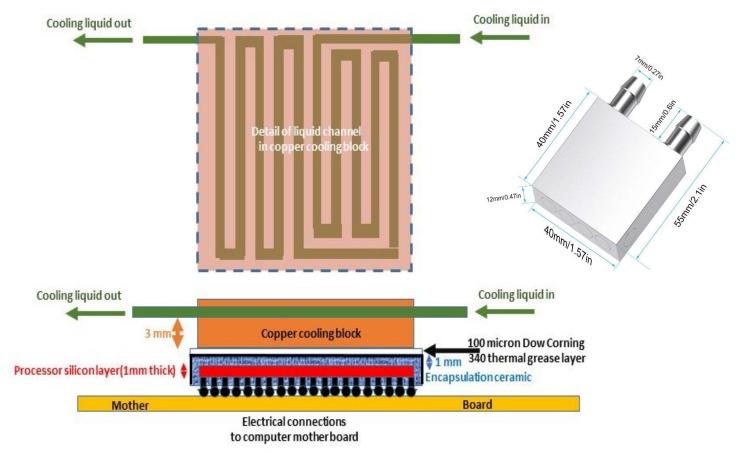

5.2 Monophase cooling and conducting heat into a coolant

Problem (2) – see also separate sheet:

A core processor chip in a PC dissipates 100W of heat and has a 4 x 4cm square profile. The user has attached a 4 x 4cm channelled copper block on top, through which liquid flows to cool the processor. The cooling block makes contact with a thin metal jacket on top of the chip through a 100 micron layer of Dow Corning 340 thermal-conductive grease.

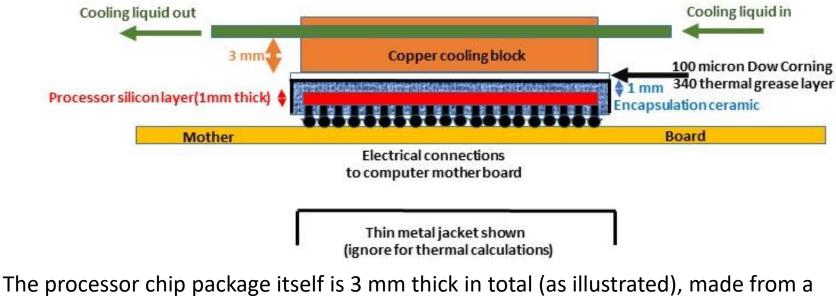

1 mm-thick active silicon layer centrally-sandwiched with 1 mm of ceramic encapsulant above & below it. The ceramic fill has a thermal conductivity of 200 Wm⁻¹.K⁻¹. 4 Physics 524: Survey of Instrumentation & Laboratory Techniques:

Unit 5: Cooling & Thermal management © G. Hallewell (2023)

5.2 Monophase cooling and conducting heat into a coolant

Problem (2: cont) – see also separate sheet

Note: the heat is dissipated in the doped semiconductor implanted into the surface of the active silicon layer **facing down** towards the connector to the mother board, and must first pass through 1 mm of silicon substrate in the opposite (up) direction on its way to the cooling block. Any heat loss by conduction through the connector pins to the mother board can be ignored. The very small thermal resistance of the thin topside metal jacket can also be neglected in the calculation; you can pretend that it isn't there.

The heat from the chip can be thought of as passing through 1 mm of silicon and a further 1mm of ceramic before passing through a 100 micron (0.1 mm) thick layer of Dow Corning 340 thermal paste, and finally through the copper cooling block with an effective thickness of 3 mm before reaching the cooling liquid channel, as shown in the figure.

5.2 Monophase cooling and conducting heat into a coolant

Problem (2: cont) – see also separate sheet

For the first 4 questions you can consider that the coolant to enters the block 20 °C and leaves at 30 °C. The average temperature of the liquid in the cooling channel can thus be taken to be 25 °C.

What are the (progressively-increasing) temperatures on the following surfaces;

- Q1: The surface of the copper block in contact with the top face of the Dow Corning 340 thermal grease film (A)? (This is 3mm from the plane of the coolant channel)
- Q2: The surface of the ceramic in contact with the bottom face of the 100 micron Dow Corning 340 thermal grease film (B)?
- Q3: The hot (downfacing) side of the1 mm thick processor chip itself (C)?

Note: you have to consider the thermal resistance of two materials in series to get to this figure. **Q4**: Which material contributes the biggest temperature difference (temperature difference across itself)? **Q5**: What method would you use to reduce the contribution of this layer (mechanical solutions acceptable)?

Building on knowledge

Q6: The user has a choice between water or a non-conductive modern liquid coolant with GWP = 0 (3M NOVEC[®] 649 [2.2]), but the pump available can only circulate a maximum of 3 grams per second (a mass flow of 0.03 kg.s⁻¹) of any liquid. What is the input temperature of NOVEC 649 to the copper cooling block to maintain an average temperature in the block cooling channel of 25 °C? (Hint: this calculation uses the concept of coolant heat capacity and mass flow from the previous problem.

Heat exchangers (1)

Example of a "perfect" (full contact, not full jacket) heat exchanger in which all 3 phases of matter interact (no intermediate surfaces):



solid fresh water → sea water (water with around 35 kg/tonne of salt, which acts as a freezing point depressant);


solid fresh water 🗲 air;

peripheral fresh meltwater → *sea water* and *air* ;

(Picture credit: TheRiderPost.com:

<u>https://www.theriderpost.com/lifestyle/environnement/iceberg-titanic-sechoue-cote-canada/</u>) Beautiful but something perhaps you would rather wish you were not witnessing on a Sunday afternoon bike ride along the coast.


Heat exchangers (2)

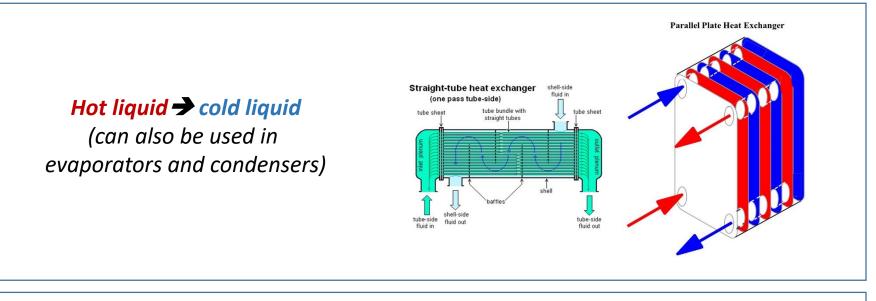



Hot liquid → Cold gas (air) the humble automobile radiator

Heat exchangers (3): and in your refrigerator...

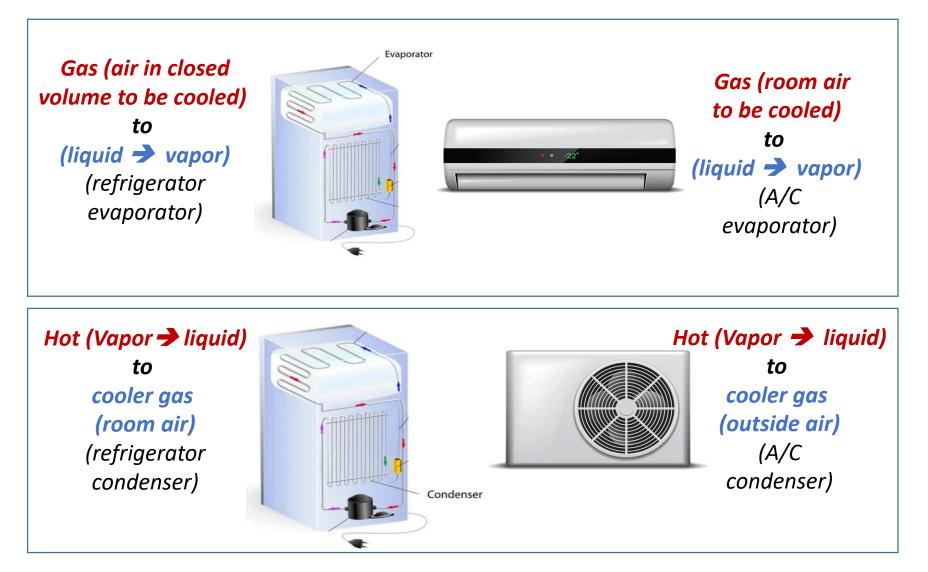




The Cool Science Behind Heat Pumps.





https://reliancehomecomfort.com/learning-centre/cool-science-behind-heat-pumps/

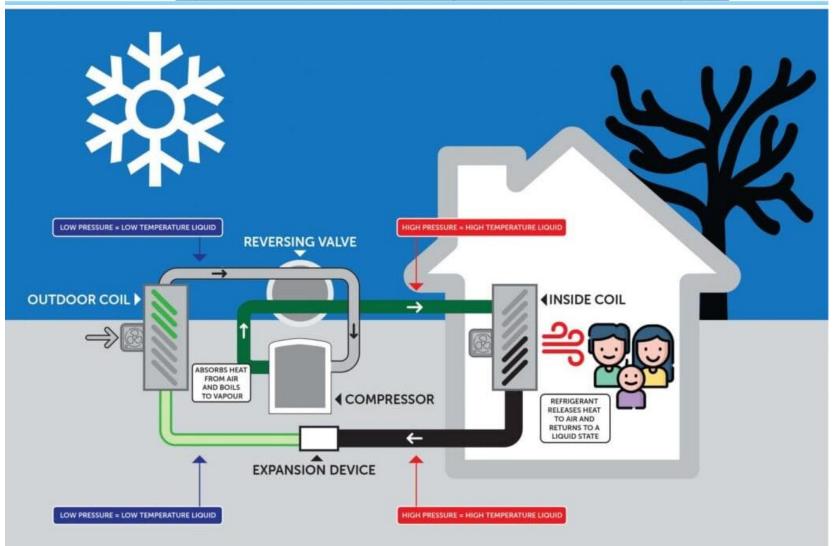





The Cool Science Behind Heat Pumps.

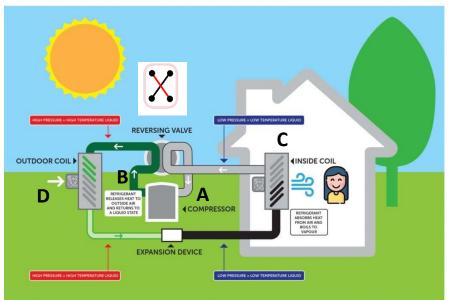

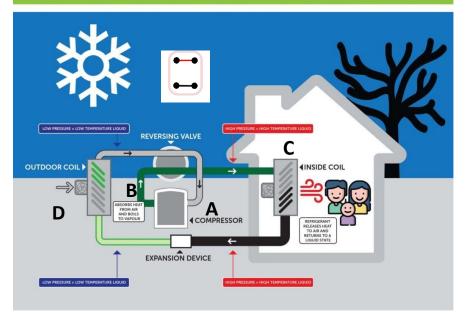


The special component: a (usually electric – driven) fluid "4-way switch"

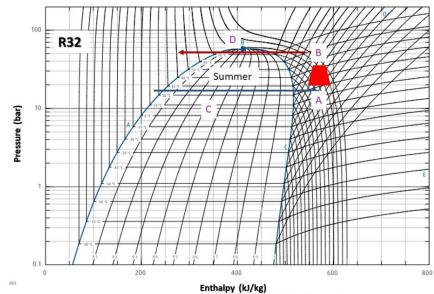

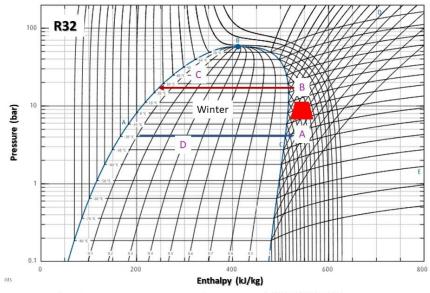

Heat exchangers (4): ...

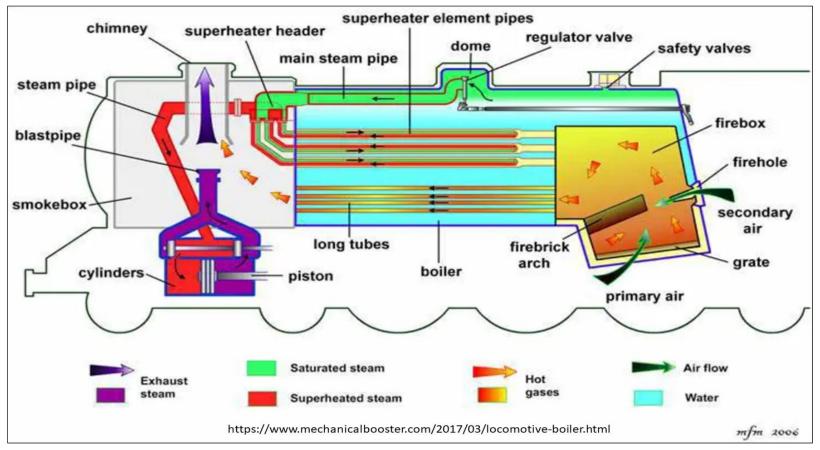


Another form of evaporative heat exchanger: the steam locomotive:

Boils water, then adds another thermodynamic step: superheating steam to reduce its saturation content and lessen the risk of compressive condensation in the cylinders

Heat exchangers (5): can be huge - like this condenser...



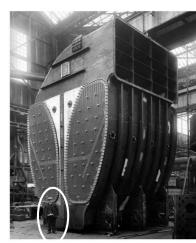


Hot (Steam → liquid) to cooler liquid (sea water) (Oil-fired boilers → steam turbines → condensers (closed feedwater circuit)) Seawater coolant enters & leaves condensers through openings in hull.

RMS Queen Mary (Long Beach, CA)

Ship completed 1936, John Brown shipyard, Clydebank, Glasgow, Scotland Displacement: 77,400 long tons (78,642 metric tons) Length: 1,019.4 ft (310.7 m): Beam: 118 ft (36.0 m), Height: 181 ft (55.2 m) Draught: 38 ft 9 in (11.8 m), Decks: 12 Installed power: 24 × Yarrow boilers Propulsion: 4 × Parsons geared steam turbines, 4 shafts, 200,000 shp (150,000 kW) Speed: 28.5 kts (52.8 km/h; 32.8 mph)


Heat exchangers (6): can be huge - like this cooling tower...

Hot liquid to cooler gas (air):

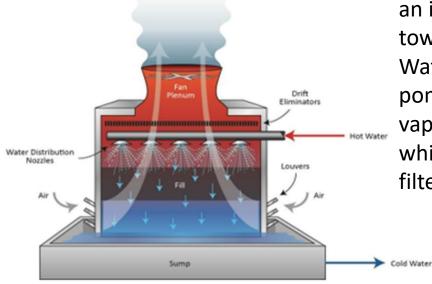

Water cooling tower, typically used at power stations and big industrial plants & data centers. Secondary hot water from a heat exchanger cooling an industrial process is pumped to the top of the tower and sprayed into a counter flow of air. Water is thus cooled and collected in the bottom pond. The circuit is open, some water escapes as vapour and must be replenished,

while that collected in the bottom pond must be filtered on its way back to the heat exchanger

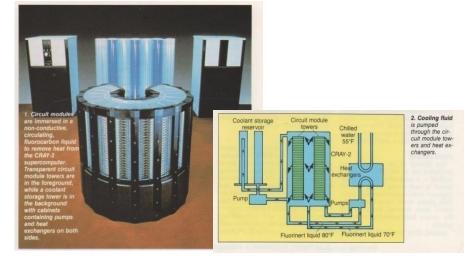

Heat exchangers (7): and small too (100 Wattish) – like this overclocking (?) installation...

